



1. Assemble Ikea Dresser First.
2. Use Handles of your choice (changing the hardware really makes a difference)
3. Take the board 36"x96" and cut in half to yield two pieces measuring 48"x36".

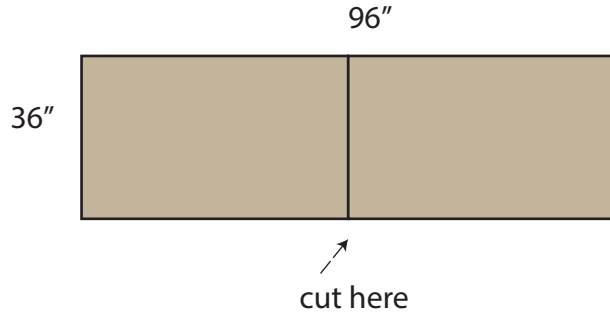

4. Take the boards and stack them so that the new piece yields a 48"x72" table top. Use the table latches to secure both boards together.

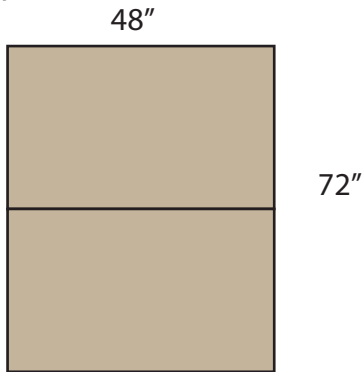

5. Assemble the Ikea Trestle legs.
6. Place behind the Hemnes dresser.
7. Note the Ikea Hemnes is 37.5" assembled and the board is 1.25" thick. This height would be too tall for most individuals. Counter height is 36". The hemnes legs will likely need to be trimmed. ( My end table top height was 37" since I am tall).
8. Stain the table top to desired color per stain instructions. (Early American by Minwax was my choice) The sealer used was Polycrylic matte finish.
9. Trestle legs are adjustable for the height of the table.
10. The batting roll can be stored between trestle legs by placing the wooden dowel between the legs. Mark where the dowel it needs to be trimmed.